






A (x2)

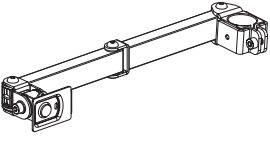


B (x2)



C (x1)



D (x1)



E (x1)



F (x1)



G (x1)



H (x2)



I (x2)



J (x1)



K (x4)



L (x1)
M5x16



M (x1)
M10x20



N (x4)
M6x10



O (x4)
M4x8



P (x1)
4mm



Q (x1)
6mm



M-A (x4)
M4x12




M-B (x4)
M5x12





M-C (x4)
D5

1

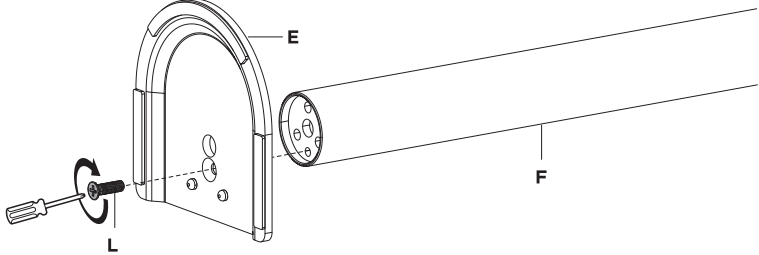

2

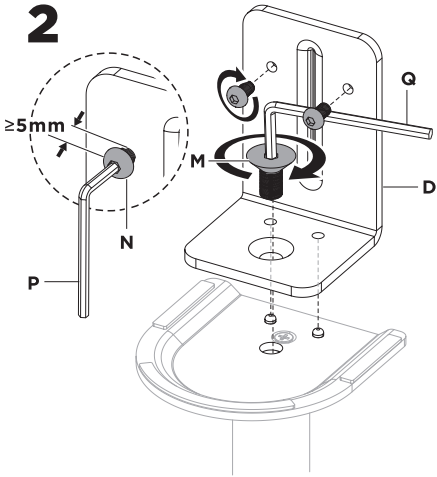

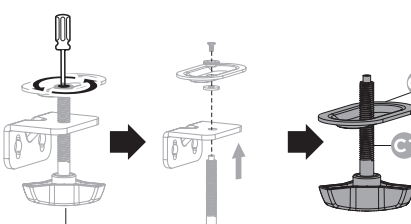


Desktop with Existing Through-Hole.


10-40mm

OR


10-40mm

ø 10mm (ø 3/8")

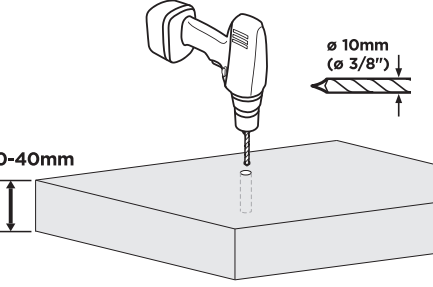


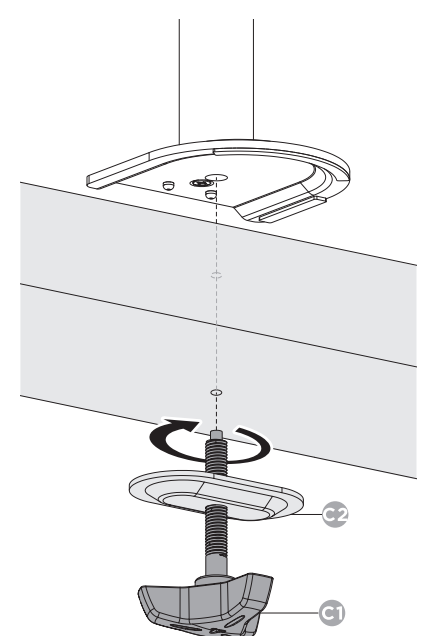


3

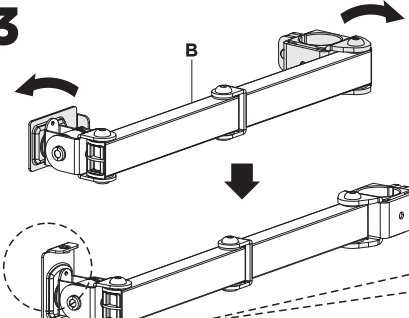


You will need to position the VESA Mounts to an UP position. To do that insert the VESA plate and rotate it to an upright position as shown. When complete, remove the VESA plate and proceed to the next step.

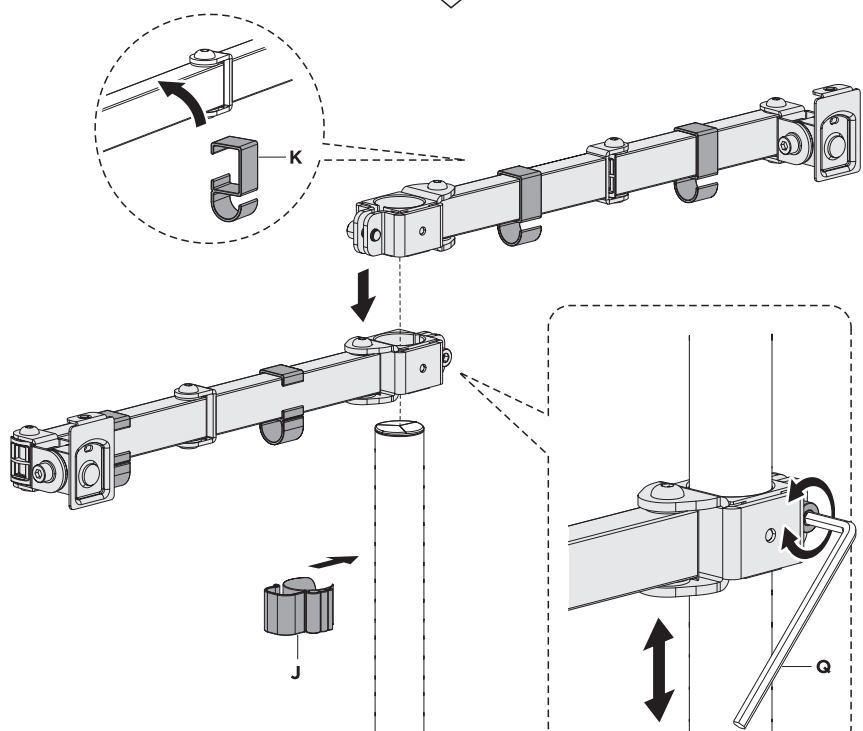


4




✓



✗ Too long



✗ Too short

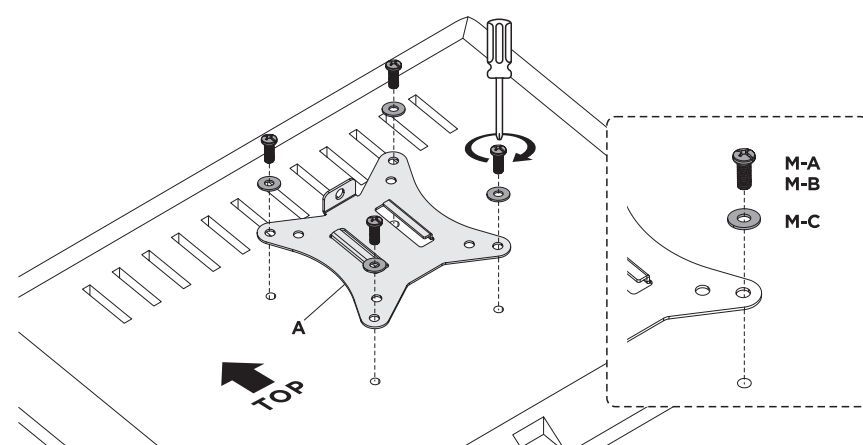

5

